


Waterproof Decking Install

 knotwood.com/installs/waterproof-decking-install/



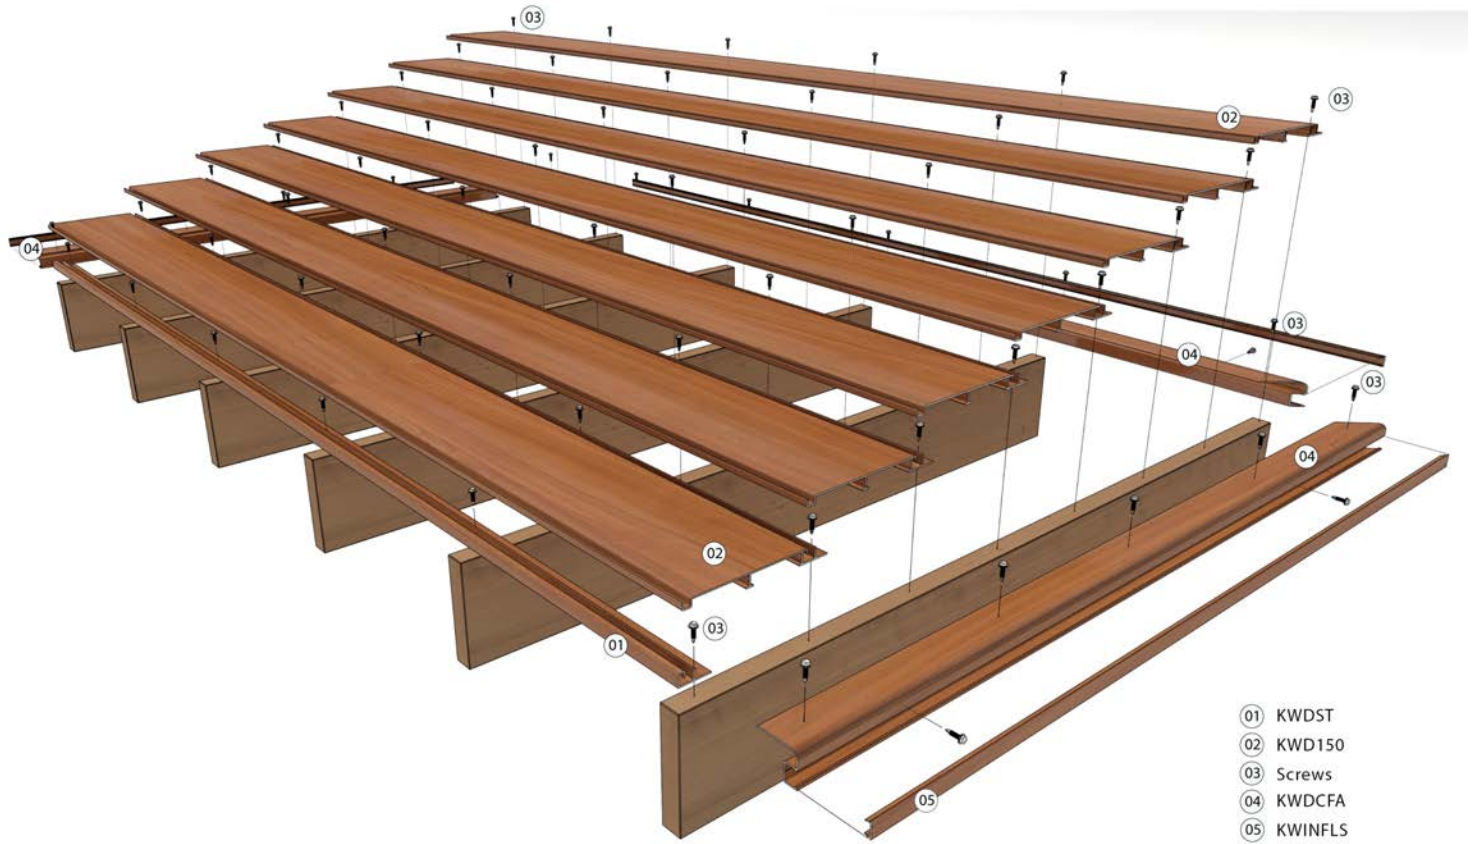

1 Screw decking starter (KWDST) to joists. NOTE: max 450mm (18") centres.

2 Install decking board (KWD100) (KWD150).

3 Screw to joists.

4 Repeat until complete.

5 Mitre decking finishing angle (KWDCFA) 45 degrees.

6 Screw to decking boards.